

# **SUPER SELECT BINGO MACHINE**

## **INSTRUCTIONS**

**Before using the machine, please read the following instructions carefully:**

**Plug the machine in at a suitable mains outlet. Your Thomas Super Select will come on automatically. As part of your machine self check, all lights will momentarily illuminate.**

<u>Game Size:</u>	This is automatically set for 1 – 90, but can be changed by holding the <b>‘JACKPOT / RESET’</b> button and pressing the <b>‘SELECT’</b> button. (1-80, 1-75, and 1-49 game size can be chosen, the latter can be used to select your National Lottery numbers)
<u>Jackpot:</u>	(Also known as Snowball) This can be set by pressing the <b>‘JACKPOT / RESET’</b> button twice and holding in, at the same time press and hold the <b>‘SELECT’</b> button until the required number is reached. NB this must be set before the start of each jackpot game.
<u>Select:</u>	Press the <b>‘SELECT’</b> button to draw the numbers to call.
<u>Clear</u>	At the end of a game, press and hold the <b>‘JACKPOT / RESET’</b> button to clear the screen and to start another game.
<u>Audience Display Delay</u>	This feature allows the caller to announce a call before displaying to the audience on release of the <b>‘SELECT’</b> button.
<u>Overdraw</u>	Should <b>‘HOUSE’</b> be called before the release of the <b>‘SELECT’</b> button, the call to be made, may be temporarily pushed back by pressing the <b>‘JACKPOT/ RESET’</b> button. It will reappear on the next <b>‘SELECT’</b>
<u>Review</u>	Calls displayed to the audience may be sequentially reviewed in the reverse order that they were selected with short presses of the <b>JACKPOT / RESET’</b> button. The game will be restored to the last draw made on the first press of the <b>‘SELECT’</b> button, thereafter, continuing the game.