





**1** Lay out all components and ensure that they match the parts list.


**2** Insert all Locking Clips into the connectors 9255 & 9217.

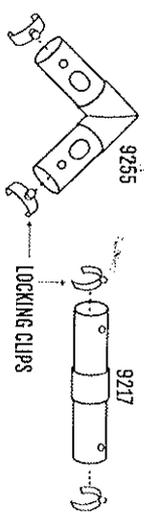

**3** Assemble the base, attaching parts 8951 & 9033 to the connectors.

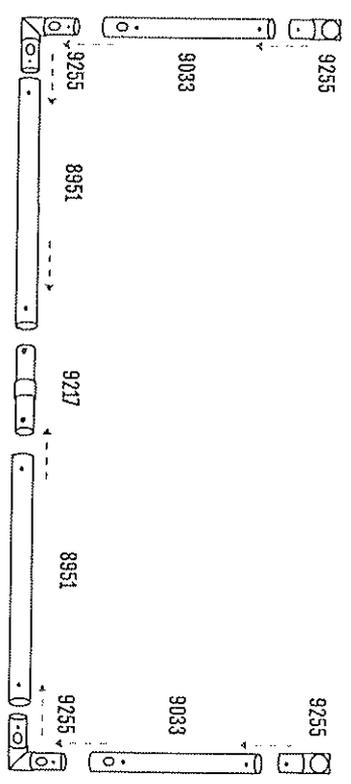


**4** Assemble the crossbar and the upright section, attaching 8982 & 8951 to connectors.

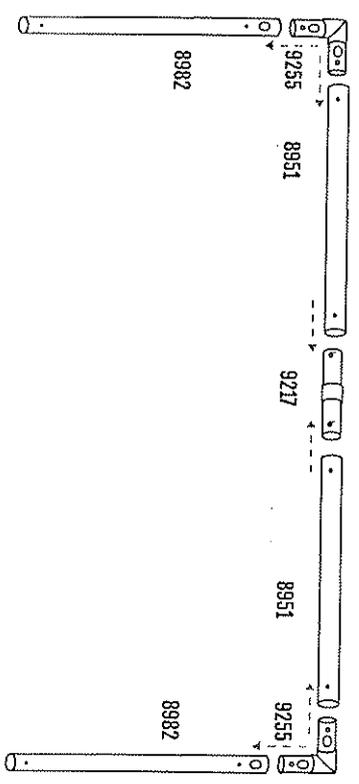

**5** Fit the crossbar (step 4) to the base (step 3), affixing the 2 x 9255 to the 2 x 9217.

**6** Assemble both arching tension bars, connecting 2 x 9149 to 1 x 9170.



**7** Lay the goal on its front. Fit the tension bars to the uprights, before returning the goal to the correct position. Secure the tension bars into the base. The tension bars will flex, allowing them to be put into place.

